

SECTION 4

NAVIGATION SYSTEM: MEMORY POINTS

Navigation system: Memory points

- [Navigation settings](#) 114
 - [Setting up the “Home”](#) 115
 - [Setting up the “Preset Destinations”](#) 117
 - [Setting up the “Address Book”](#) 120
 - [Setting up the “Areas to Avoid”](#) 126
 - [Deleting previous destinations](#) 131

Navigation settings —


Points or areas on the map can be registered.

The registered points can be used on the “Destination” screen. (See “ — Destination search by Home” on page 68, “ — Destination search by Preset destinations” on page 68 and “ — Destination search by “Address Book”” on page 81.)

Registered areas are avoided at the time of route search.



1. Push the “MENU” button and select “Setup”.

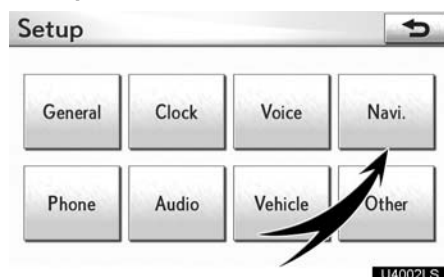

2. Select “Navi.”.



On this screen, the following operations can be performed.

No.	Function
1	Sets home (See page 115.)
2	Sets preset destinations (See page 117.)
3	Sets address book (See page 120.)
4	Sets area to avoid (See page 126.)
5	Deletes previous destinations (See page 131.)
6	Detailed navigation settings (See page 350.)

— Setting up the “Home”

If home has been registered, that information can be recalled by using “Go Home” on the “Destination” screen. (See “— Destination search by Home” on page 68.)

1. Push the “MENU” button and select “Setup”.

2. Select “Navi.” on the “Setup” screen.



3. Select “Home”.



- Registering home (See page 115.)
- Editing home (See page 116.)
- Deleting home (See page 117.)

(a) Registering home

1. Push the “MENU” button and select “Setup”.

2. Select “Navi.” on the “Setup” screen.

3. Select “Home” on the “Navigation Settings” screen.



4. Select “Set Home”.



5. Enter the location in the same way as for a destination search. (See “Destination search” on page 66.)

NAVIGATION SYSTEM: MEMORY POINTS

When registration of home is completed, the "Edit Home" screen will be displayed.

Edit Home

Name: [Field] [Edit]

Show Name: ☐ On ☐ Off [Edit]

Location: 13 1/2 ST NW, WASHINGT... [Edit]
Lat.: N38°53'43" Long.: W77°1'50"

Phone #: [Field] [Edit]

Icon: [Icon] [Edit]

[OK] U4007LC

6. Select "OK".

To edit registered information, see "(b) Editing home" on page 116.

(b) Editing home

1. Push the "MENU" button and select "Setup".

2. Select "Navi." on the "Setup" screen.

3. Select "Home" on the "Navigation Settings" screen.

Home

Your home is set

[Set Home] [Edit] [Delete]

U4008LC

4. Select "Edit".

Edit Home

Name: [Field] [Edit]

Show Name: ☐ On ☐ Off [Edit]

Location: 13 1/2 ST NW, WASHINGT... [Edit]
Lat.: N38°53'43" Long.: W77°1'50"

Phone #: [Field] [Edit]

Icon: [Icon] [Edit]

[OK] U4008LC

5. Select "Edit" for the item you want to change.

"Name": To edit home name. The names can be displayed on the map. (See page 124.)

"Location": To edit location information. (See page 125.)

"Phone #": To edit telephone numbers. (See page 125.)

"Icon": To select icons to be displayed on the map. (See page 123.)

6. Select "OK".

(c) Deleting home

1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Home” on the “Navigation Settings” screen.



4. Select “Delete”.
5. To delete home, select “Yes”. To cancel the deletion, select “No”.

— Setting up the “Preset Destinations”

If preset destination has been registered, that information can be recalled by using “Preset Destinations” on the “Destination” screen. (See “— Destination search by Preset Destinations” on page 68.)

1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.



3. Select “Preset Destinations”.



- Registering preset destination (See page 118.)
- Editing preset destination (See page 119.)
- Deleting preset destination (See page 120.)

(a) Registering preset destinations


1. Push the "MENU" button and select "Setup".

2. Select "Navi." on the "Setup" screen.


3. Select "Preset Destinations" on the "Navigation Settings" screen.



4. Select "Set".

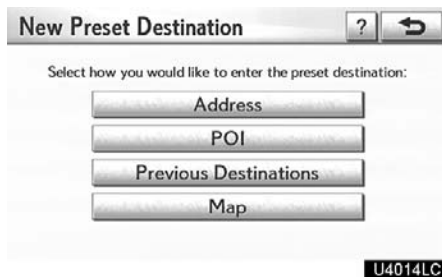


5. Enter the location in the same way as for a destination search. (See "Destination search" on page 66.)

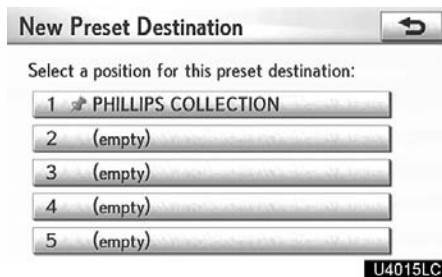

6. Select a position for this preset destination.

When registration of preset destination is completed, the "Edit Preset Destination" screen will be displayed.

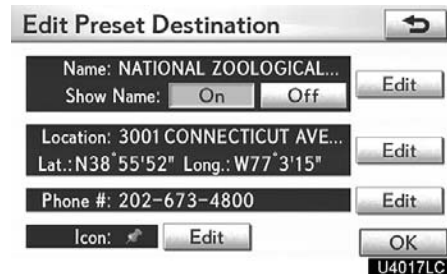

7. Select "OK".

To edit registered information, see "(b) Editing preset destinations" on page 119.

(b) Editing preset destinations


1. Push the "MENU" button and select "Setup".

2. Select "Navi." on the "Setup" screen.


3. Select "Preset Destinations" on the "Navigation Settings" screen.



4. Select "Edit".

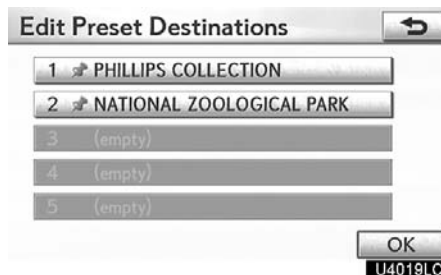

5. Select the button of the desired preset destination.

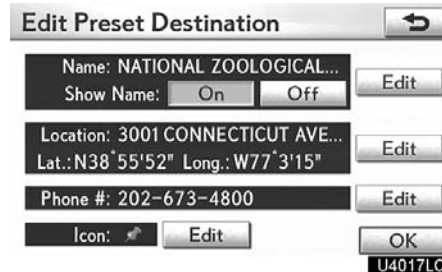

6. Select "Edit" for the item you want to change.

"Name": To edit preset destination names. The names can be displayed on the map. (See page 124.)

"Location": To edit location information. (See page 125.)

"Phone #": To edit telephone numbers. (See page 125.)

"Icon": To select icons to be displayed on the map. (See page 123.)

7. Select "OK".


(c) Deleting preset destinations

1. Push the "MENU" button and select "Setup".
2. Select "Navi." on the "Setup" screen.
3. Select "Preset Destinations" on the "Navigation Settings" screen.



U4020LC

4. Select "Delete".

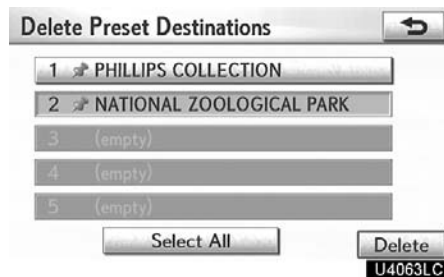

U4063LC

5. Select the preset destination for deletion.

"Select All": To select all preset destinations on the list.

"Unselect All": To unselect all of the selected preset destinations.

6. Select "Delete".

7. To delete preset destination, select "Yes". To cancel the deletion, select "No".

— Setting up the "Address Book"


Points or areas on the map can be registered.

1. Push the "MENU" button and select "Setup".
2. Select "Navi." on the "Setup" screen.



U4021LC

3. Select "Address Book".

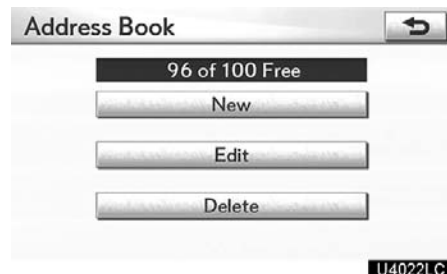

U4022LC


- Registering address book entries (See page 121.)
- Editing address book entries (See page 122.)
- Deleting address book entries (See page 126.)

(a) Registering address book entries


1. Push the “MENU” button and select “Setup”.

2. Select “Navi.” on the “Setup” screen.

3. Select “Address Book” on the “Navigation Settings” screen.

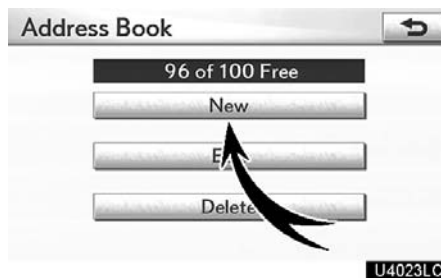


4. Select “New”.

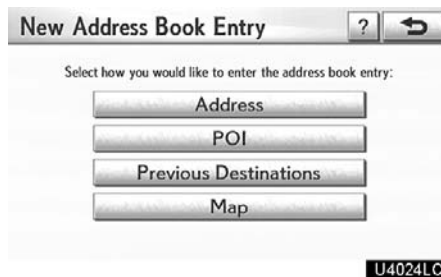

5. Enter the location in the same way as for a destination search. (See “Destination search” on page 66.)

After the address book entry has been registered, the “Edit Address Book Entry” screen will be displayed.

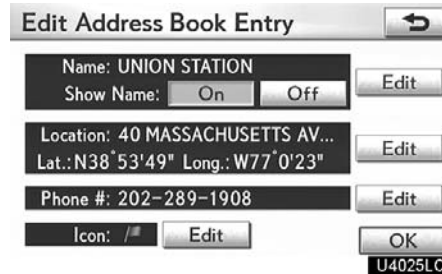

6. Select “OK”.

To edit registered information, see “(b) Editing address book entries” on page 122.


INFORMATION

Up to 100 address book entries can be registered.


(b) Editing address book entries

The icon, name, location and/or telephone number of a registered address book entry can be edited.


1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Address Book” on the “Navigation Settings” screen.

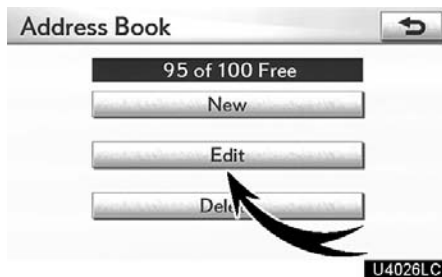

4. Select “Edit”.

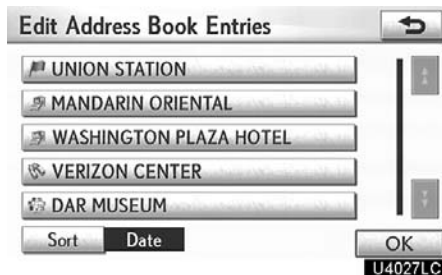

5. Select the button of the desired address book entry.

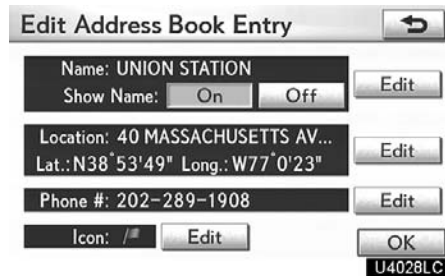

6. Select “Edit” for the item you want to change.

“Name”: To edit address book entry names. The names can be displayed on the map. (See page 124.)


“Location”: To edit location information. (See page 125.)

“Phone #”: To edit telephone numbers. (See page 125.)


“Icon”: To select icons to be displayed on the map. (See page 123.)

7. Select “OK”.

- To change “Icon”

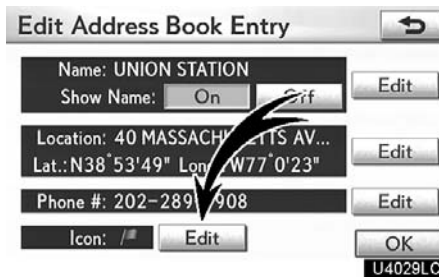

1. Select “Edit” of “Icon”.

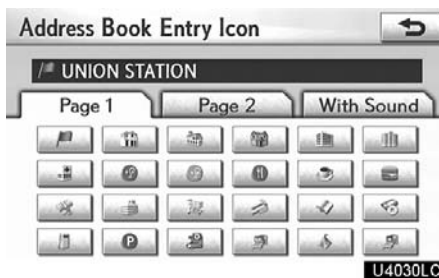


2. Select the desired icon.

Change pages by selecting “Page 1”, “Page 2” or “With Sound” tab.

SOUND ICONS


You can set a sound for some address book entries. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

1. Select “With Sound” on the “Address Book Entry Icon” screen.

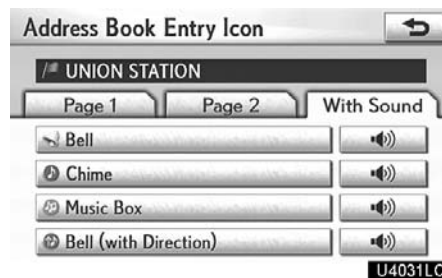

2. Select the desired sound icon.


The next screen appears when “Bell (with Direction)” is selected.

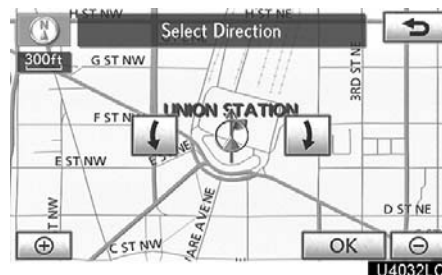

Select either  or  to adjust the direction. Select “OK”.

The bell sounds only when the vehicle approaches this point in the direction that has been set.

- To change “Name”

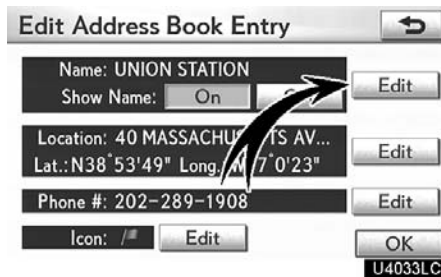

Edit Address Book Entry

Name: UNION STATION

Show Name: ☒ On ☐ Off **Edit**

Location: 40 MASSACHUSETTS AV...


Lat.: N38°53'49" Long.: W71°0'23" **Edit**

Phone #: 202-289-1908 **Edit**

Icon: /# **Edit** **OK**

U4033LC

1. Select “Edit” of “Name”.

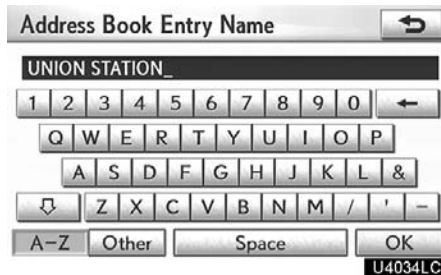

Address Book Entry Name

UNION STATION

1 2 3 4 5 6 7 8 9 0 ←

Q W E R T Y U I O P

A S D F G H J K L &

↵ Z X C V B N M / ' -

A-Z Other Space **OK**

U4034LC

2. Enter the name using the alphanumeric keys.


Up to 32 characters can be entered.

3. Select “OK”.

The previous screen will be displayed.

DISPLAYING MEMORY POINT NAMES

The name of an address book entry can be set to display on the map.

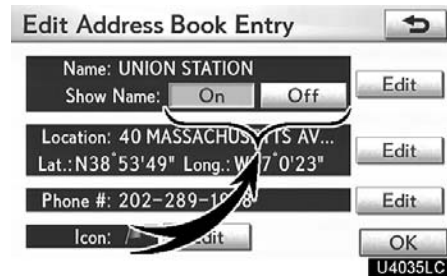

Edit Address Book Entry

Name: UNION STATION

Show Name: ☐ On ☒ Off **Edit**

Location: 40 MASSACHUSETTS AV...

Lat.: N38°53'49" Long.: W71°0'23" **Edit**


Phone #: 202-289-1908 **Edit**

Icon: /# **Edit** **OK**

U4035LC

To show the name, select “On” on the “Edit Address Book Entry” screen. To not show it, select “Off”.

- To change “Location”

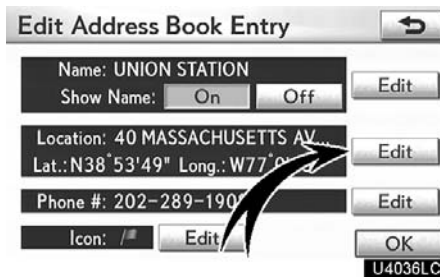


1. Select “Edit” of “Location”.




2. Select one of the 8 directional buttons to move the cursor to the desired point on the map.
3. Select “OK”.

The previous screen will be displayed.

- To change “Phone #” (telephone number)

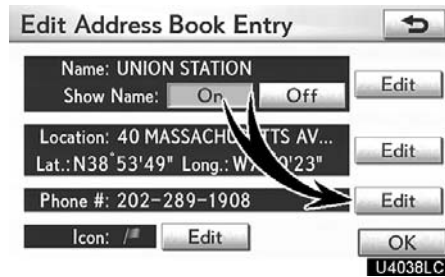

1. Select “Edit” of “Phone #”.

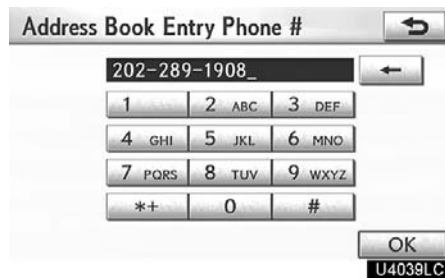


2. Enter the number using number keys.

3. Select “OK”.


The previous screen will be displayed.

(c) Deleting address book entries

1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Address Book” on the “Navigation Settings” screen.

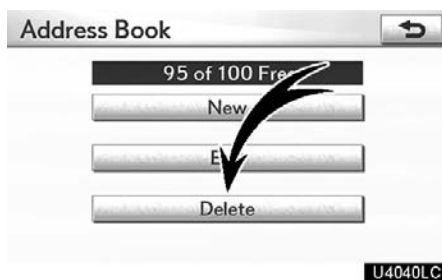

4. Select “Delete”.

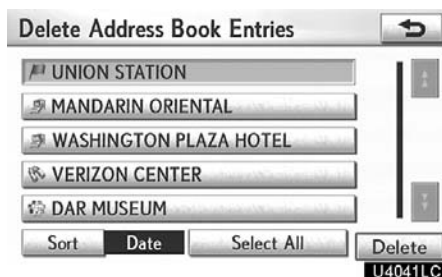

5. Select the button to be deleted.

“Select All”: To select all addresses in the address book.

“Unselect All”: To unselect all of the selected addresses.

6. Select “Delete”.

7. To delete the address book entry, select “Yes”. To cancel the deletion, select “No”.

— Setting up the “Areas to Avoid”

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.



3. Select “Areas to Avoid”.



- Registering areas to avoid (See page 127.)
- Editing areas to avoid (See page 128.)
- Deleting areas to avoid (See page 131.)

(a) Registering areas to avoid

1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Areas to Avoid” on the “Navigation Settings” screen.



4. Select “New”.




5. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “Destination search” on page 66.)





6. Scroll the map to the desired point.

“Adjust Location”: To adjust the position in smaller increments.

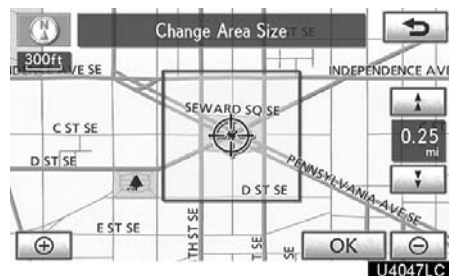7. Select “Enter”.



8. Select either  or  to change the size of the area to be avoided.

9. Select “OK”.

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.


(b) Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Areas to Avoid” on the “Navigation Settings” screen.



4. Select “Edit”.

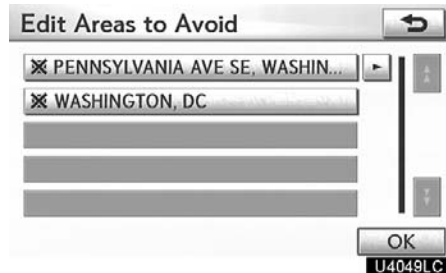

5. Select the desired area button.

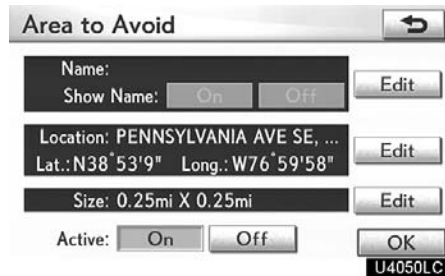

6. Select “Edit” for the item you want to change.

“Name”: To edit the name of the area to avoid. The names can be displayed on the map. (See page 129.)

“Location”: To edit area location. (See page 130.)

“Size”: To edit area size. (See page 130.)

“Active”: To turn on or off the area to avoid feature. To turn on the feature select “On” on the “Edit Area to Avoid” screen. To turn off the feature select “Off” on the “Edit Area to Avoid” screen.

7. Select “OK”.

- To change “Name”

1. Select “Edit” of “Name”.

2. Enter the name using alphanumeric keys.

Up to 32 characters can be entered.

3. Select “OK”.

The previous screen will be displayed.

DISPLAYING NAMES OF AREAS TO BE AVOIDED

The name of an area to be avoided that may be displayed on the map can be set.

To show the name, select “On” on the “Area to Avoid” screen. To not show it, select “Off”.

NAVIGATION SYSTEM: MEMORY POINTS

● To change "Location"

Area to Avoid

Name:

Show Name:

Location: PENNSYLVANIA AVE SE

Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4054LC

1. Select "Edit" of "Location".



2. Select the 8 directional button to move the cursor to the desired point on the map.

3. Select "OK".

The previous screen will be displayed.

● To change "Size"

Area to Avoid

Name:

Show Name:

Location: PENNSYLVANIA AVE SE, ...

Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4056LC

1. Select "Edit" of "Size".



2. Select either or to change the size of the area to be avoided.

3. Select "OK".

The previous screen will be displayed.


(c) Deleting areas to avoid

1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Areas to Avoid” on the “Navigation Settings” screen.



U4058LC

4. Select “Delete”.

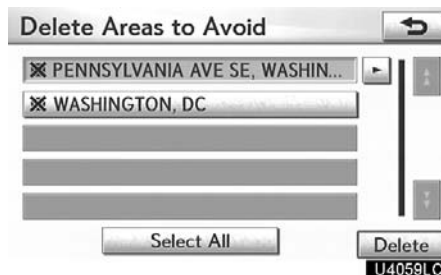

U4059LC

5. Select the button to be deleted.

“**Select All**”: To select all registered areas to avoid in the system.

“**Unselect All**”: To unselect all registered areas to avoid in the system.

6. Select “Delete”.

7. To delete the area, select “Yes”. To cancel the deletion, select “No”.

— Deleting previous destinations


The previous destination can be deleted.

1. Push the “MENU” button and select “Setup”.
2. Select “Navi.” on the “Setup” screen.



U4060LC

3. Select “Delete Previous Dest.”.

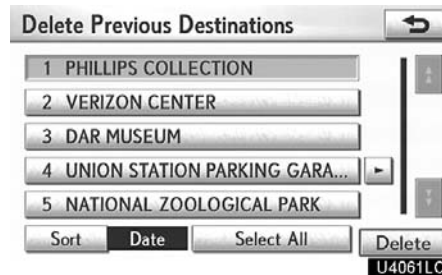

U4061LC

4. Select the button you want to delete.

“**Select All**”: To select all previous destinations in the system.

“**Unselect All**”: To unselect all previous destinations in the system.

5. Select “Delete”.

NAVIGATION SYSTEM: MEMORY POINTS



6. To delete the destination, select "Yes". To cancel the deletion, select "No".